


Quick Operations Instructions for the VFD Controller ACS355 ABB Control

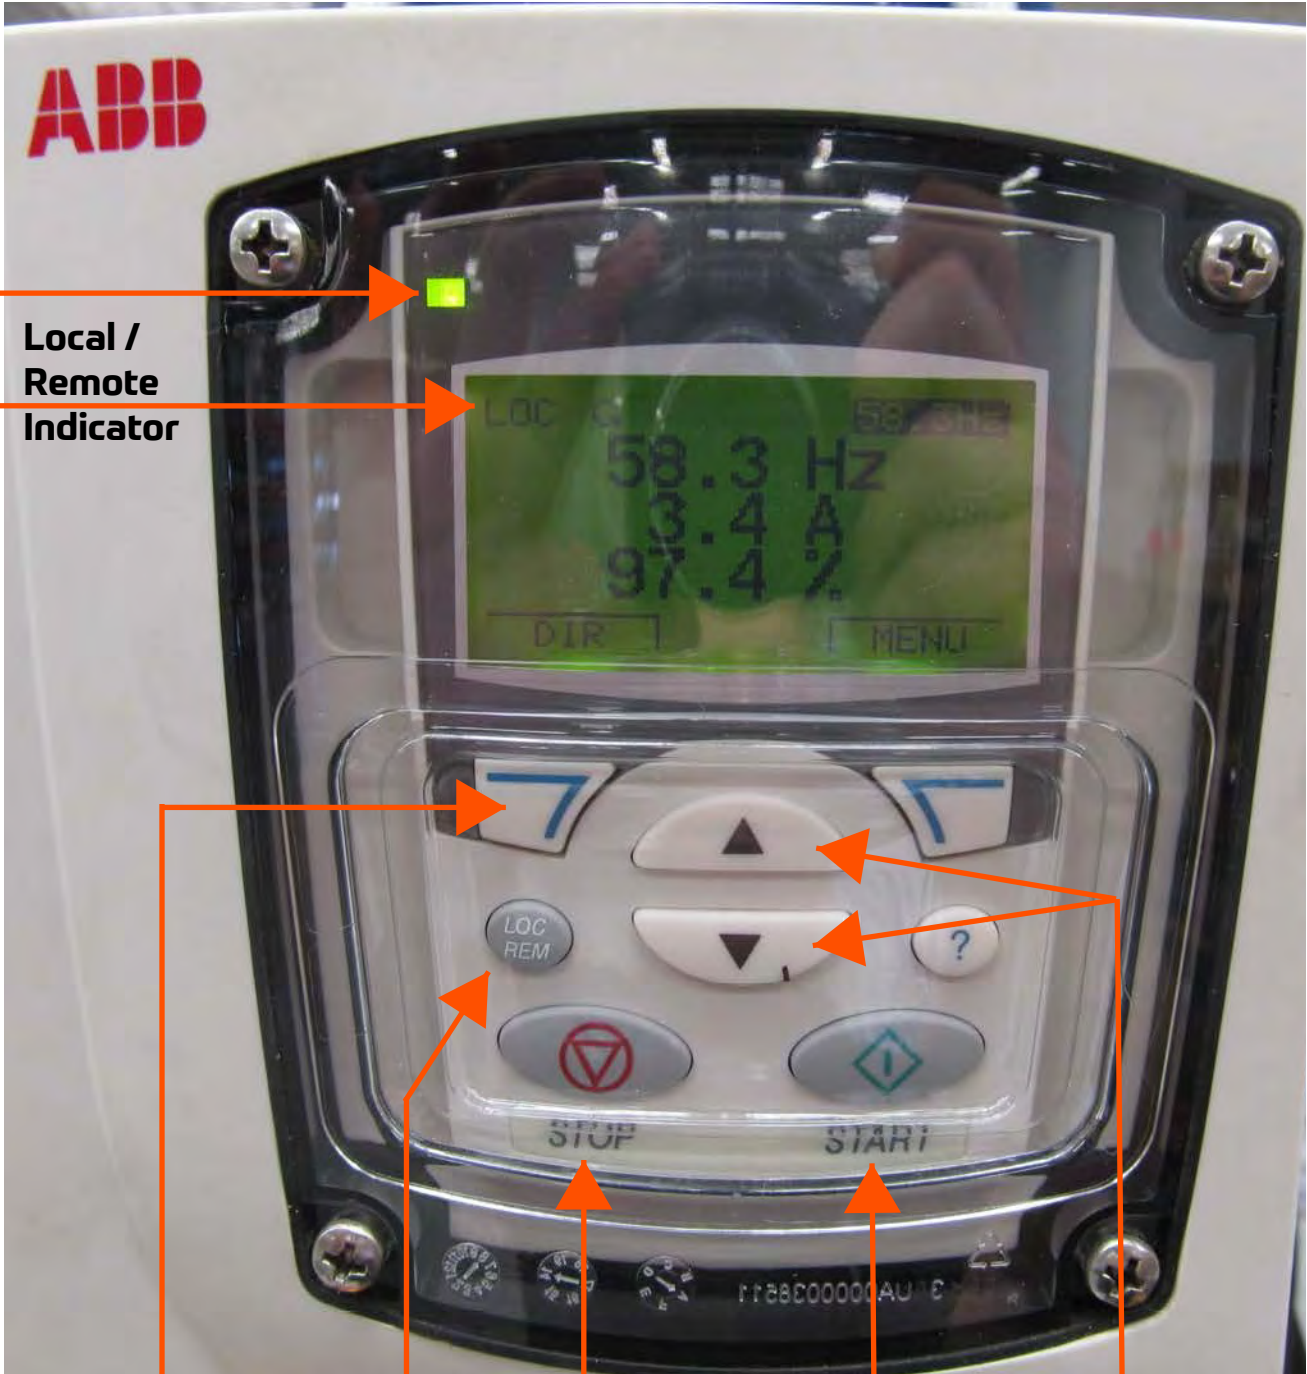

Local / Remote Indicator

To Change Direction:

To Stop:

To Start:

To Change Speed:

Local / Remote - Must be in "Local" for the controller to operate the fan.

Look for "LOC" or "REM" if the upper left hand corner of the display.

The green LED indicator is solid whenever there is no alarm that has not been cleared. If the LED is flashing green it means there is an alarm that has not been cleared. The fan may still operate, depending on the alarm, but the alarm should be investigated and cleared immediately.